



Starter Solenoid
(Not included
with this kit)

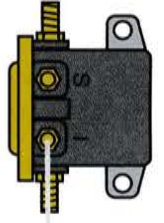

To "I" on starter solenoid

12V ignition
feed from
ignition switch
(Not included
with this kit)

Ballast Resistor
(Not included
with this kit)

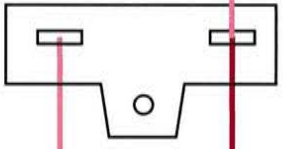

To ignition switch side of resistor

To coil side of resistor




Tach

To pulse terminal on tach (if so equipped)

To 2 way
ignition
module
connector

Ignition
Module
(Not included
with this kit)

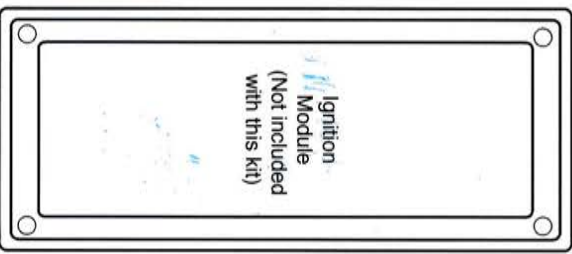


To 4 way
ignition
module
connector




This cavity is blank




Ignition
Coil

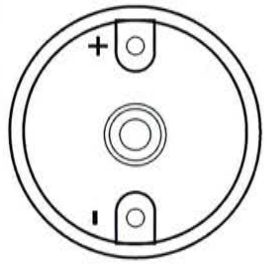


To ignition
coil

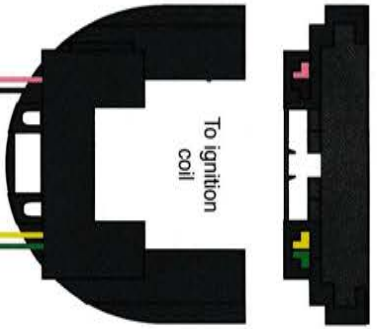

Distributor

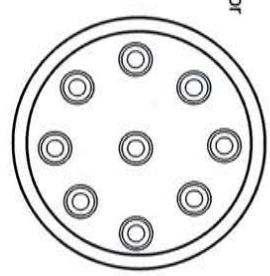

To distributor
connector

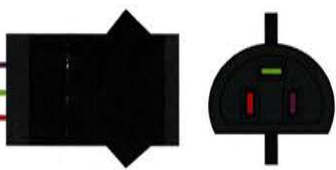

92970218



**American
Autowire**

www.americanautowire.com 856-933-0801

Instructions for Ford Duraspark
Ignition Harness

Lot#844324



500918

92970218 instruction sheet rev 1.0 1/19/2015