



VENTILATING AND HEATING TROUBLE DIAGNOSIS GUIDE

<p>INSUFFICIENT OR NO HEAT</p>	<ol style="list-style-type: none"> 1. Burned out fuse or loose wires to the heater blower. 2. Defective motor ground, or defective blower motor. 3. Fan loose on motor shaft, or motor stalled. 4. Defective heater blower switch. 5. A kinked, clogged, or collapsed water hose. 	<ol style="list-style-type: none"> 6. Improperly connected heater hoses. 7. Plugged heater core, or air outlet. 8. Improperly installed or defective engine thermostat. 9. Incorrectly installed and adjusted control cables. 10. Air leaks in the body.
<p>INSUFFICIENT OR NO DEFROSTING</p>	<ol style="list-style-type: none"> 1. Improperly adjusted defroster control cable, or disconnected defroster hose. 2. Binding defroster valve. 3. Plugged or loose defroster 	<ol style="list-style-type: none"> nozzle, or obstructed defroster openings at windshield. 4. Defroster hoses not properly attached at plenum.

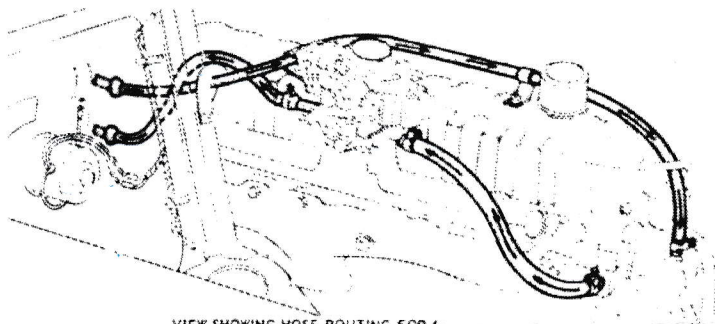

VIEW SHOWING HOSE ROUTING FOR 6 CYLINDER ENGINE WITH AUTOMATIC CHOKE

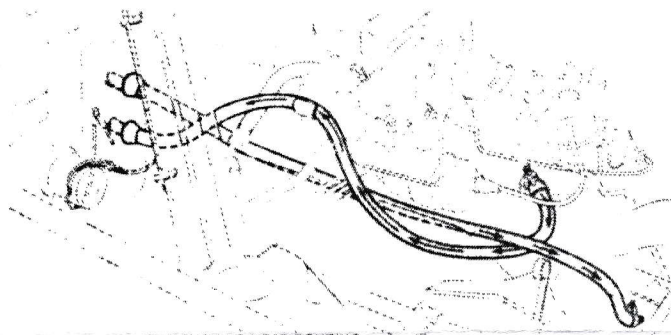

VIEW SHOWING HOSE ROUTING FOR 8 CYLINDER ENGINE

