

## **Polyurethane Coil Spring Seat Bushings** 5A305-1B

Please note that these bushings *will not* fit the smaller diameter shafts on the reproduction spring seats.

- 1) Inspect spring seat, replace if damaged or cracked. The original outer sleeve and inner shaft will be reused.
- 2) Press out the original rubber insert. If you do not have access to a press, drill several 3/16" holes in the rubber and remove or burn out the bushing with a torch. Do not damage the outer sleeve or inner shaft.
- 3) Newer seats use a crimped in outer sleeve. This must be ground ALMOST flush. Grind with care and do not remove too much material. Leave enough material to keep the outer sleeve from loosening.
- 4) Clean the original steel shaft and the inside of the outer steel sleeve. Oil the shaft or wrap it in teflon tape. Slide in the polyurethane bushings. Slide in the original shaft and reinstall the completed spring seat into car.

N6A305-1DINST

## **Polyurethane Coil Spring Seat Bushings** 5A305-1B

Please note that these bushings *will not* fit the smaller diameter shafts on the reproduction spring seats.

- 1) Inspect spring seat, replace if damaged or cracked. The original outer sleeve and inner shaft will be reused.
- 2) Press out the original rubber insert. If you do not have access to a press, drill several 3/16" holes in the rubber and remove or burn out the bushing with a torch. Do not damage the outer sleeve or inner shaft.
- 3) Newer seats use a crimped in outer sleeve. This must be ground ALMOST flush. Grind with care and do not remove too much material. Leave enough material to keep the outer sleeve from loosening.
- 4) Clean the original steel shaft and the inside of the outer steel sleeve. Oil the shaft or wrap it in teflon tape. Slide in the polyurethane bushings. Slide in the original shaft and reinstall the completed spring seat into car.

N5A305-1BINST

## **Polyurethane Coil Spring Seat Bushings** 5A305-1B

Please note that these bushings *will not* fit the smaller diameter shafts on the reproduction spring seats.

- 1) Inspect spring seat, replace if damaged or cracked. The original outer sleeve and inner shaft will be reused.
- 2) Press out the original rubber insert. If you do not have access to a press, drill several 3/16" holes in the rubber and remove or burn out the bushing with a torch. Do not damage the outer sleeve or inner shaft.
- 3) Newer seats use a crimped in outer sleeve. This must be ground ALMOST flush. Grind with care and do not remove too much material. Leave enough material to keep the outer sleeve from loosening.
- 4) Clean the original steel shaft and the inside of the outer steel sleeve. Oil the shaft or wrap it in teflon tape. Slide in the polyurethane bushings. Slide in the original shaft and reinstall the completed spring seat into car.

N5A305-1BINST

## **Polyurethane Coil Spring Seat Bushings** 5A305-1B

Please note that these bushings *will not* fit the smaller diameter shafts on the reproduction spring seats.

- 1) Inspect spring seat, replace if damaged or cracked. The original outer sleeve and inner shaft will be reused.
- 2) Press out the original rubber insert. If you do not have access to a press, drill several 3/16" holes in the rubber and remove or burn out the bushing with a torch. Do not damage the outer sleeve or inner shaft.
- 3) Newer seats use a crimped in outer sleeve. This must be ground ALMOST flush. Grind with care and do not remove too much material. Leave enough material to keep the outer sleeve from loosening.
- 4) Clean the original steel shaft and the inside of the outer steel sleeve. Oil the shaft or wrap it in teflon tape. Slide in the polyurethane bushings. Slide in the original shaft and reinstall the completed spring seat into car.

N5A305-1BINST