

Installation, Modification and Care of Rubber Firewall Insulator Panels

Rubber Firewall INSULATORS™

Installation: Remove all electrical/mechanical controls from the vehicle metal firewall. Remove mounting fasteners carefully so that they can be cleaned and reused; then remove the old insulator pad. Clean and paint the firewall as required. Position the new Firewall Insulator against the firewall and using a small Phillips screw driver, locate a mounting hole near the top/center of the firewall and insert a long nail. Work toward the sides and bottom inserting nails as you go. When you are satisfied with the fit and alignment, remove a nail and replace with a fastener. You may find the assistance of a friend helpful. Once all of the mounting fasteners are in place, re-install the electrical/mechanical controls, etc. Do not over-tighten mounting screws—"snug them." It is better to tighten them little-by-little-over-time as the materials relax and compress.

Modifications: Many of our Firewall Insulators are shipped with "factory knockouts" inscribed on the surface. Additional holes can be easily installed by cutting through the rubber with an X-Acto type knife and "cross cutting" the insulation material.

Care: This Firewall Insulator is made of a vinyl rubber material and needs little or no care. It can be cleaned like any other upholstery material with a damp cloth or vinyl conditioner. Do not clean with solvents, as this may damage the surface luster.

We value your feedback!

Tell us about your experience at:
www.quietride.com/feedback.html

See us also on:   




PART #	DESCRIPTION
MUST 6970- HVAC	1969-1970 Mustang Firewall Insulator

**Please Open and Inspect Your
Packing Slip and Products Immediately!**

This product was reproduced for the year, make and model of the vehicle you specified in your order. However, there may be some variations between models in any given year of manufacture. If you find that this product does not fit your vehicle exactly, contact us immediately.

Products that have been modified can not be returned or exchanged.
No Returns or Refunds will be made after 90 Days.

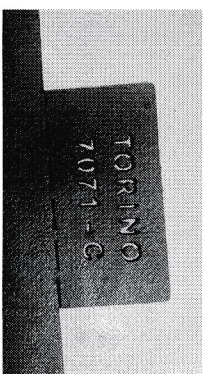

Product Identification Tab. Please note the "product identification tab" on the edge of the rubber firewall. This tab features the part number of the product you ordered. The tab is "perforated" along the natural edge of the firewall and is easily snapped off prior to installation.



Order Line: 888-777-3410 Tech: 209-942-4777 • Fax: 209-942-4476
6507 Pacific Ave. Ste.#334, Stockton, CA 95207