


OVC Mustang Front Brake Cooling Duct Installation Tips

- **Diffuser fingers on each duct are over bent for shipping.**
- **Once mounted, bend them in (toward car) for tire clearance.**
- **Ducts slide over fiberglass air inlets.**
- **Some cutting or trimming of the back of the duct or car sheet metal may be required for optimal fit.**
- **Drill hole if needed for factory fuel line.**
- **Once mounted, always check tire clearance. They are designed to clear 8" wide racing slicks.**

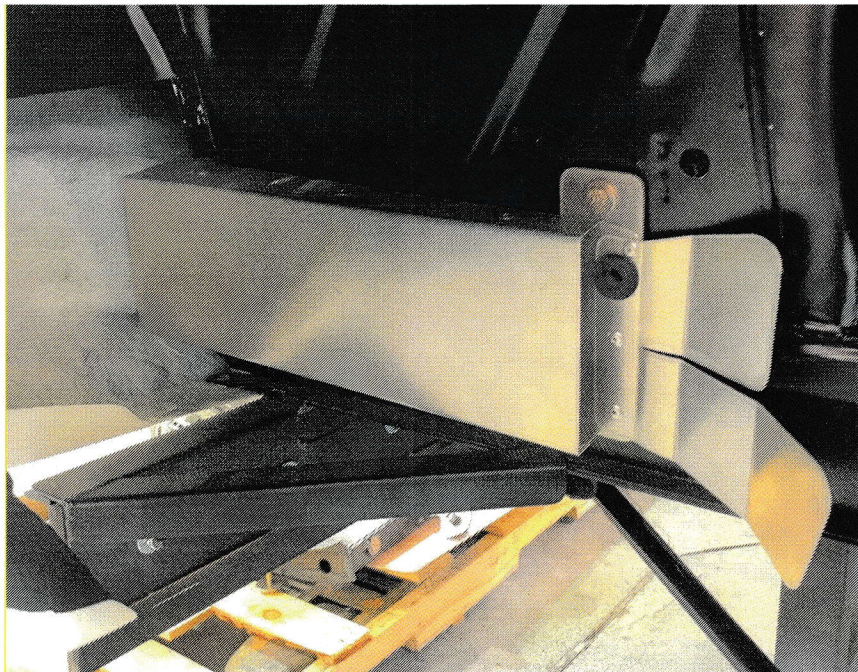

- **OVC Front Bumpers/Valances and Brake Ducts are proudly hand made in the USA.**
- **OVC Mustang 19021 S. Figueroa St. Gardena, Ca 90248**