


ATTENTION! VERY IMPORTANT!


DO NOT resort to any of these “wiring” methods!

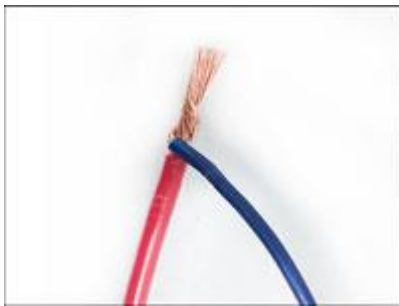

Twisted Together Wires



Wire Nuts

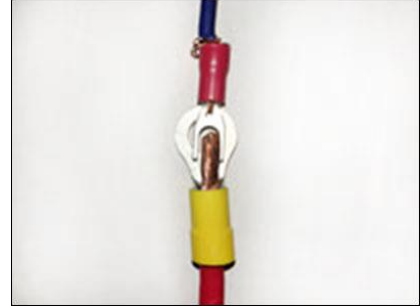

Mismatched Connectors



T-Taps!



Wire Jammed Into a Fuse




Broken Butt Connectors



This!



Bare wires!

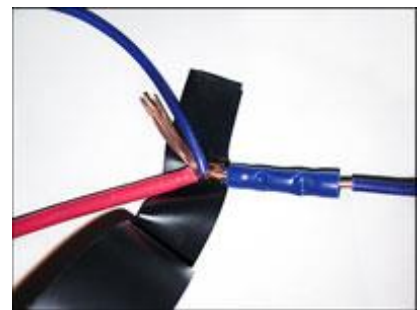


Electrical Taping Bare Wires



Cheapest Crimpers Available



DO NOT USE ROMEX

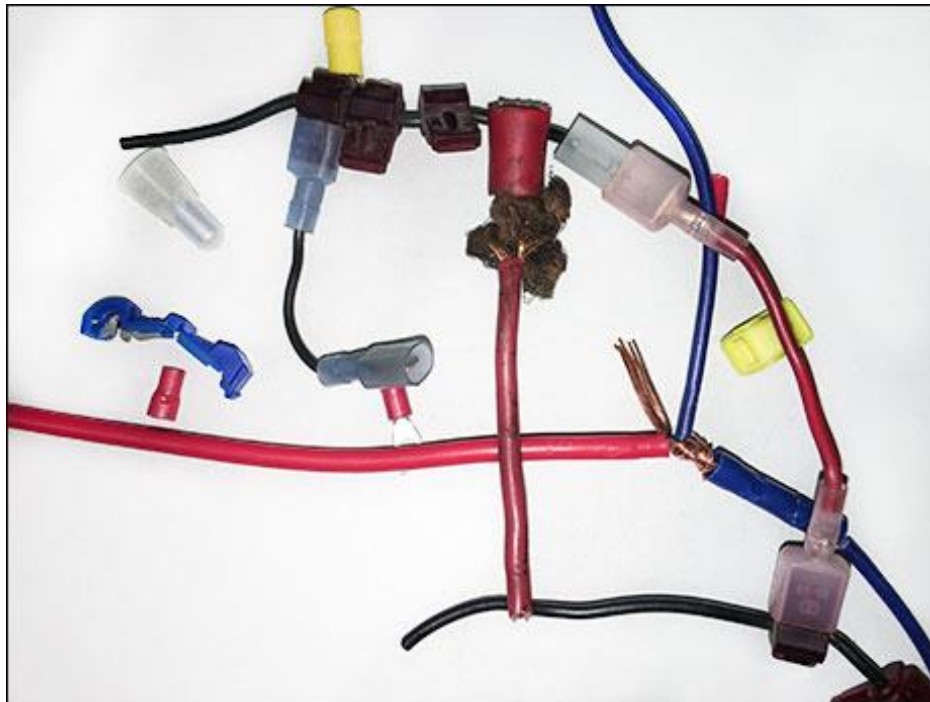

You'll Thank Us Later!

These are Acceptable!



OEM Quality Connectors (supplied)



Soldered Connection w/ adhesive heat shrink

199R11194

Date: 9-12-16