



## Strut Tower Brace 2001 Bullitt Mustang (STB-M01)

Installing a Stiffeners strut tower brace adds strength and stiffness to the front end by integrating the strut towers and firewall, greatly reducing flex and alignment changes caused by front suspension loads during cornering and braking. This results in an increase in steering response, stability and reduction in understeer. This brace is designed to work with popular models of both 3 and 4-bolt style caster/chamber plates as well as aftermarket cold-air inlets and superchargers. If C/C plates are used, they install on top of the STB mounting brackets.

### Kit Includes:

- 1 Strut Tower Brace
- 1 Bolt Plate
- 2 5/16"-18 Nyloc Nuts
- 2 5/16" USS Flat Washers

### Required Tools:

Basic hand tools  
Floor jack  
Drill  
1/8" drill bit  
5/16" drill bit  
Center punch/hammer

**Note:** *It is highly recommended to have alignment checked after installing brace.*

**Install Time:** Approximately 3 hrs.

### Installation:

1. Raise hood, remove wiper arms and weather-strip located in front of plastic cowl panel.
2. The plastic upper firewall panel must be marked and cut for clearance to allow proper installation of the brace. To do this, position STB on car by placing firewall mount plate against plastic upper firewall panel and allow strut tower mounting plates to rest above strut mounts. Brace should be centered right-to-left (Fig.1) *[NOTE: Brace will not sit flat.]*
3. Trace around top and sides of firewall mounting plate onto plastic panel. Remove brace.
4. Remove all screws holding plastic upper firewall panel and remove panel. Remove plastic cowl panel at base of windshield.
5. Cut away area marked in step 3 from plastic panel and set aside. *[NOTE: A cutting wheel or jig-saw works well for this.]*
6. Using 1/8" bit, drill out aluminum rivets (2 per side) located on strut tower plates (Fig.2). If needed, a punch can be used to tap out any remaining rivet body.

7. Before removing plates, place jack under front cross-member and raise car 3~4". This will remove some load from the strut mounts and help keep them from moving when plate is removed (tires must remain on the ground).
8. Remove retaining nuts and bolts securing plates. ***Remove plates, they will not be reused.***
9. Place strut tower brace into position over factory mounting studs. Align slots in STB to slots in strut tower and mark location of the two mounting holes on the firewall.
10. Remove brace and step-drill two mounting holes using 1/8" & 5/16" bits. *[NOTE: Use a punch and mark hole locations prior to drilling to keep drill bit in desired location.]*
11. Re-install brace and loosely fasten factory nuts and bolts into strut towers.
12. Insert bolt plate through back of firewall and loosely secure to brace using supplied washers and nyloc nuts. (Fig.3)
13. Snug firewall mounting bolts. Final tighten all nuts and bolts.
14. Lower vehicle and remove floor jack.

15. Re-install upper firewall panel; trim any additional plastic from around mounting plate.  
(Fig.4 shows final result)

16. Install cowl panel, wiper arms and weather-strip.  
17. Have alignment checked.

Fig. 1



Fig. 2

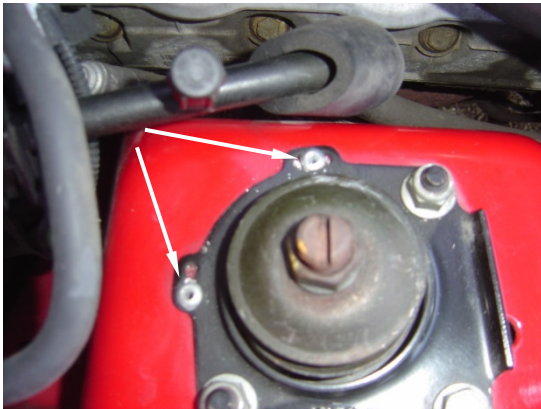


Fig. 3



Fig. 4



(Mach1 shown, modification of plastic panel is the same)