



**1999 – 2004 Mustang
Detail Corral
CDC # 105091**



About the Product:

The **Detail Corral** is designed and manufactured exclusively by Classic Design Concepts and produced using OE quality materials. This product is intended for light weight storage. CDC is not responsible for failure of product due to over loading.

Note: By design, the “Living Hinges” will become more flexible over time; this *is not* part failure. *Read instructions thoroughly before installing.*

Kit Components:

- 1 Detail Corral Assembly
- 2 Brackets
- 2 Push Pin Fasteners
- 4 1/4" – 20 Well Nuts
- 4 1/4" – 20 x 15/16 Bolt
- 1 Alcohol Pack
- 1 Velcro Circle
- 1 Installation Guide w/Template

CDC Part #s

- 0411-5500-01
- 65000
- 50002
- 15009
- 950006
- 85002
- CD4II3BY

Tools Required:

- | | |
|----------------|----------------------|
| ▪ Drill Motor | ▪ 1/2" Drill |
| ▪ Center Punch | ▪ Scissors |
| ▪ 8mm Socket | ▪ 1/4" Drive Ratchet |
| ▪ 1/8" Drill | ▪ 3/4" Masking Tape |
| ▪ 7/16" Socket | |

Detail Corral Installation Procedure:

1. Open Trunk.
2. Cut out the provided template. (Located on last page of instructions.)
3. Place template on driver side of deck lid as shown in *Fig. 1* and center punch through the paper template on to the deck lid. **Hint:** Use a piece of masking tape to hold template in position. Flip template over and repeat on the passenger side as shown in *Fig 2*.

Fig 1



Fig 2



4. Drill a 1/8" pilot hole in both locations.

Caution: Drill slowly and use a Drill Stop to prevent damaging the top side of the deck lid.

5. Drill 1/2" holes at both locations. Use extreme caution drill slowly.

Caution: Drill slowly and use a Drill Stop to prevent damaging the top side of the deck lid.

Fig 3



Fig 4



CD4II3BY

6. Press the (4) provided well nuts (50002) into positions as shown in *Fig. 5*.

Note: 2 of the well nuts will be inserted into existing holes, 2 into the holes you just drilled.

Caution: Be careful not to push the well nut through the deck lid. **Hint:** Use the provided $\frac{1}{4}$ " – 20 bolts to aid in the installation of the well nuts.

Fig 5


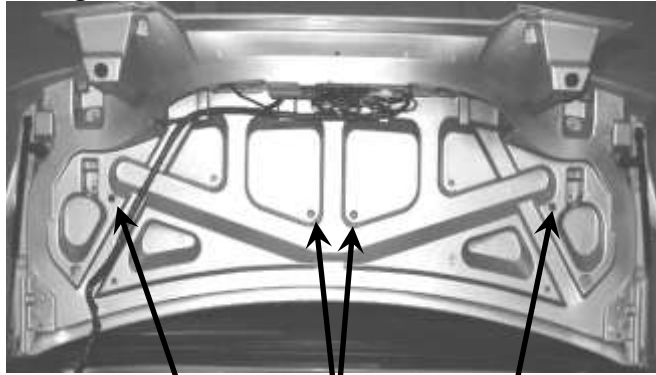


Fig 6



7. Temporarily remove the emergency trunk release handle from its cable.
8. Temporarily remove the lower (2) 8mm fasteners from the trunk latch mechanism.
9. Install the (2) provided brackets (0411-5500-01) as shown in *Fig. 7* by reinstalling factory fasteners. **Note:** Place brackets against latch housing then tighten.

Fig 7

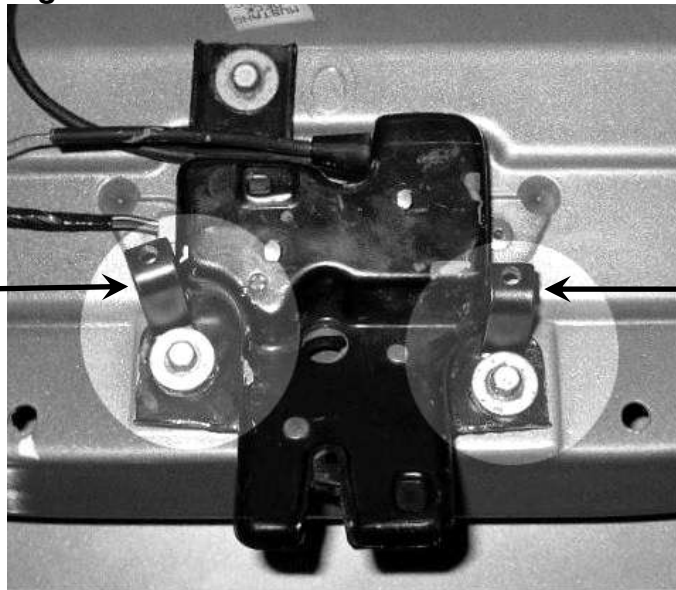

Bracket 0411-5500-01

Bracket 0411-5500-01

10. Place the trunk release cable through the $\frac{1}{4}$ " hole of the Detail Corral as shown in *Fig.8*
11. Using the provided $\frac{1}{4}$ " – 20 bolts (15009), begin to fasten the Detail Corral to the deck lid. Do not tighten until all fasteners have been started, do not over tighten. **Note:** If well nuts begin to spin, press Detail Corral firmly against deck lid and tighten bolt.


CD4II3BY

12. Clean the backside of the emergency trunk release handle with the provided alcohol pack and apply Velcro Circle (85002).
13. Reinstall emergency trunk release handle onto cable and secure Velcro to Detail Corral.

Fig 8



14. Install the (2) push pin fasteners (65000) into Brackets 0411-5500-01 and 0411-5500-01

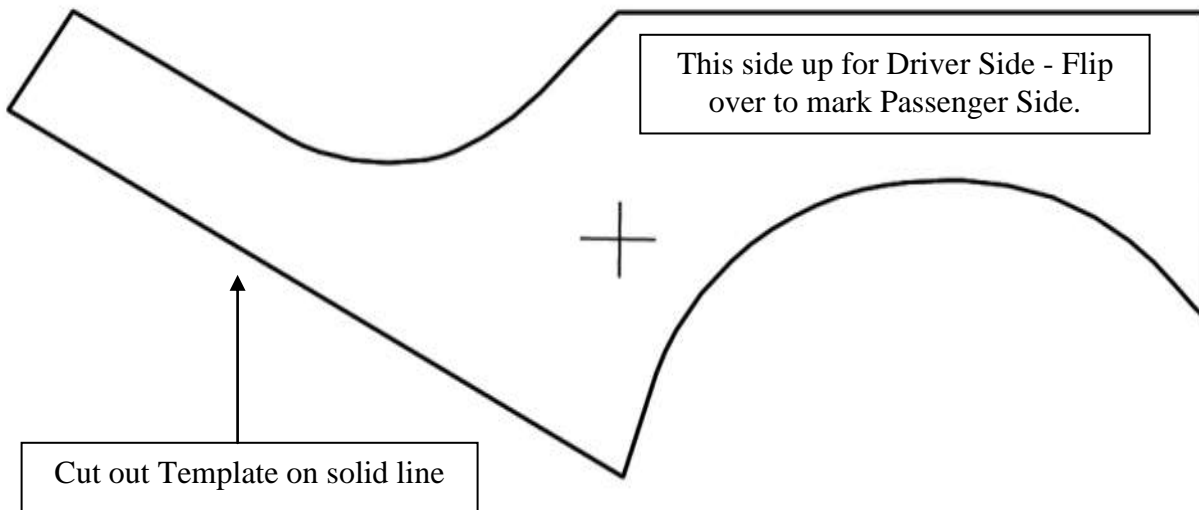

Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact Tech@classicdesignconcepts.com or call 866-624-7997.