

INSTALLATION INSTRUCTIONS

NOTE: This kit is not to be used as a replacement seat. It is not safe for passengers to ride on the panel.

Removal of factory installed parts:

1. Remove lower seat cushion, by pushing in and lifting up.
2. Remove the 2 support bars for the lower cushion → (See photo)
3. Remove all the T50 Torx head bolts holding the lower seatbelts in place.
4. Remove rear seat back assembly by removing the 2 bolts at the bottom of the unit. Lift upwards and pull towards you to raise it off the hangers.
5. Leave the factory sound deadening material in place. The Delete panels are meant to rest on the factory sound deadening material. If you choose to remove the insulation for further weight removal, you may need to leave a small section under the RSD (or use spacers) to provide the correct alignment with the rear interior panel(s).



Additional Steps for 90-93 model Coupes only

- 90-93 Mustangs have the upper seatbelt shoulder straps.
- Remove the seatbelt pod on the rear shelf in each corner.
- First remove the cover over the seatbelt mechanism.
- Remove the large nut behind the mechanism and remove unit from the car. Save the nuts.
- Special ABS Plastic covers are included with your kit to cover this hole left behind. See page 2 below on how to install them.



Installation of new Rear Seat Delete

LOWER PANELS

Place one of the new RSD Front panels into the car. To slide the second piece in, tuck the corner nearest the side panel under the factory armrest, and then slide the end over the transmission tunnel area downward for a snug fit against the other panel.

These units are meant to be snug to prevent them from sliding.



Installation (cont.)

REAR PANEL


Set the rear panel in the car. There are two pre-drilled holes in the unit near the top edge near the rear window. This step varies upon model year....

87-89 models: Use a pencil or marker to mark thru the pre-drilled hole, onto the edge of the plastic side panel. This is where you will drill a 1/4" hole through the edge for mounting.

Use the shorter supplied plastic push pins to secure the RSD rear panel, to the holes you just drilled. This hole will be out of sight if you reinstall your seats later.



90-93 models: Install the supplied **ABS plastic covers** to cover the exposed area left behind from your seatbelt mechanism. Slide the large hole in plastic cover down over protruding factory stud. Use the factory nut to secure the plastic cover. Use the supplied shorter plastic push pins through the pre-drilled holes in the upper corner of rear panel to attach the rear panel to the plastic cover you just installed. There is a smaller 1/4" pre-drilled hole in the plastic cover that should line up with pre-drilled hole in rear panel.

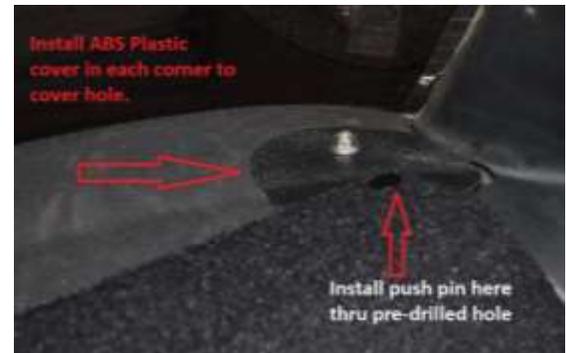

Use the remaining 4 push pins to secure the rear panel to the lower panels using the pre-drilled holes. Use your hand to lift the lower panel to align the holes and insert the push pins. →

STORAGE COMPARTMENT LIDS



1. The two storage compartment lids fit over the lower bins as shown in the photo. The Velcro strips align to hold it in place. You're Done

HELPFUL HINTS:

- When carrying heavy items, keep weight near the center of the RSD for the best weight support.