BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



INSTALLATION INSTRUCTIONS - INS281

FUEL REGULATOR REBUILD KIT

Part # 1914 // 1986-1993 Mustang LX, GT and Cobra 5.0L, 1994-1995 Mustang GT and Cobra 5.0L, 1996-1997 Mustang GT and Cobra 4.6L



No special Tools required: No special tools required




Install Time: Approximately 30 minutes.



Difficulty: Very Easy.



FF 🕒 🛗 🮯



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1



BBK PERFORMANCE LLC / For any questions, email us:

TECH@BBKPERFORMANCE.COM

3060 Performance Circle

Deland, FL 32724


Remove adjustment screw and locking nut from the top of the Fuel Regulator. NOTE: Mark the two halves with a marker to indicate the orientation of the two halves. This way it will be clocked in the right position when put back together.

STEP 3



With the Fuel Regulator clamped firmly it releases then tension on the screws remove the six screws on the bottom of the Fuel Regulator.

STEP 2

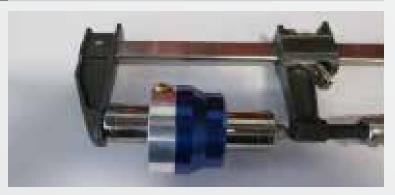


Using two 21mm sockets and a C clamp. Clamp the Fuel Regulator together firmly. NOTE: tape may be used on the two halves to prevent damage to the Fuel Regulator.

STEP 4



Once all the screws are removed loosen the C clamp slowly once there is a quarter inch gap between the two halves all tension is release proceed to unclamp and separate the two halves.

FF 🕒 🛗 🮯



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 5



BBK PERFORMANCE LLC / For any questions, email us:

3060 Performance Circle Deland, FL 32724 / TECH@BBKPERFORMANCE.COM

With the old spring taken out Its time to install the new spring supplied in the BBK Performance repair kit.

STEP 6



Place the diaphragm onto the bottom portion of the Regulator with the pointed end facing down.

STEP 7



Take the new spring that is supplied in the kit and place it onto the spring locating cup on the diaphragm.

FF 🕒 🛗 🮯



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 8





Place the spring cap on top of the spring with the pointed side facing down. With all the components together place the top portion of the Fuel Regulator on top. NOTE: While firmly holding the two half's together. Start the six screws into the bottom of the Fuel Regulator.

STEP 9

Repeat step 2 and tighten the screws firmly. NOTE: Be sure not to over tighten the screws. Reinstall washer and adjustment screw with the locking nut into the top of the Fuel Regulator.



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

